



AUDIOVOX®
ELECTRONICS CORP.

Model AA-925

Owner's Manual

3 Button Remote Keyless Entry System With Two Auxiliary Outputs

FEATURES:

- ◆ 2 Three Button, RF Transmitters
- ◆ Four Channel Code Learning Receiver
- ◆ Remote Panic In All Modes
- ◆ Built-In Parking Light Output
- ◆ LED Status Indicator
- ◆ Ignition Door Locking/Unlocking
- ◆ Horn Output

OPTIONS:

- ◆ Remote Trunk Release
- ◆ Remote Power Window Control
- ◆ Remote Garage Door Interface
- ◆ Remote Engine Starter
- ◆ Starter Interrupt
- ◆ Siren
- ◆ Access Guard / 2 Step Unlock
- ◆ Illuminated Entry

Your Keyless Entry System has many features and available options some of which must be selected at time of installation. For your reference, the list on the back page of this manual shows what features and options have been installed with this particular system. Consult your installing dealer for options that may have been installed and are not listed.

REMOTE DOOR LOCKING - ACTIVE

1. Turn the engine off, exit the vehicle and close all doors.
2. Press and release the lock button of your key chain transmitter one time, the doors will lock, the parking lights will flash once, the vehicle's horn (or optional siren) will chirp once and the dash mounted LED will begin to flash slowly confirming the system is locked.

SILENT LOCKING - ACTIVE

1. Turn the engine off, exit the vehicle and close all doors.
2. Press and hold the lock button of your key chain transmitter for two seconds, the doors will lock, the parking lights will flash once and the dash mounted LED will begin to flash slowly confirming the system is locked. The horn or optional siren will not chirp.

BACKUP PASSIVE OPERATION (AUTOMATIC)

If the passive arming feature has been selected:

Turn the engine off, exit the vehicle and close all doors.

The dash mounted LED will immediately begin to flash rapidly indicating that the 30 second passive arming timer has begun.

If any entry point is opened during the 30 second arming cycle, arming will be suspended.

When all entry points are closed, the arming cycle will begin again.

At the end of the 30 seconds, the parking lights will flash once, the vehicle's horn (or optional siren) will chirp once, and the dash mounted LED will begin to flash slowly confirming the system is armed. If the horn (or optional siren) did not sound when arming, then the chirps have been turned off. Please refer to the section titled "Eliminating the Arm/Disarm Chirps" later in this manual. Passive door locking is a selectable feature. The doors may or may not lock passively dependent upon the setup during installation.

PROTECTION WHILE THE SYSTEM IS ARMED

If the optional Starter Interrupt relay has been installed, then whenever the system is armed, the vehicle starter circuit is disabled. Thus, even with the ignition key, the vehicle will not start.

Whenever the system is armed, the dash mounted LED will slowly flash. This serves as a visual deterrent to a potential thief. This LED is a very low current light emitting diode and will not cause the battery to drain even if left unattended for long periods of time.

UNLOCKING THE SYSTEM

As you approach the vehicle, press and release the unlock button on the keychain transmitter. The doors will unlock, the parking lights will flash two times, the vehicle horn (or optional

siren) will chirp twice and the dash mounted LED will turn off. If you have the optional entry illumination circuit installed, the interior light will turn on for 30 seconds or until the ignition key is switched on.

Note: If the passive arming mode was selected at time of installation, the dash mounted LED will start flashing rapidly indicating that the system is rearming. Opening any door will suspend the automatic arming.

SILENT UNLOCKING

1. As you approach the vehicle, press and hold the unlock button of your key chain transmitter for two seconds, or until the system responds.

The doors will unlock, the parking lights will flash twice and the dash mounted LED will turn off, confirming that the system is disarmed. The vehicle horn (or optional siren) will not chirp. If you have the optional entry illumination circuit installed, the interior light will turn on for 30 seconds or until the ignition key is switched on.

Note: If the passive arming mode was selected at time of installation, the dash mounted LED will start flashing rapidly indicating that the system is rearming. Opening any door will suspend the automatic arming.

OPTIONAL ACCESS GUARD (Two Step Unlock)

If the optional 2-step unlock feature was installed, then only the driver's door will unlock after the first press of the unlock button. If you want to unlock all doors, you can simply press the unlock button of the keychain transmitter a second time.

Note: Two Step unlocking is an optional feature that **must be wired** upon installation.

VALET / PROGRAM / MANUAL OVERRIDE SWITCH

The valet switch allows you to temporarily prevent the system from arming, eliminating the need to hand your keychain transmitter to parking attendants or garage mechanics. When the system is in the valet mode, it will not passively arm or activate the starter interrupt circuit. However, all keyless entry features, as well as the remote panic feature will remain operational. To enter the valet mode:

1. Start with the valet switch in the "off" position
2. Turn the ignition switch to the "on" position.
3. Flip the valet switch to the "on" position.

The dash mounted LED will turn on solid (not flashing) indicating that the valet mode has successfully been entered.

To return to the normal mode of operation, move the valet switch to the "off" position at any time the ignition switch is in the on position.

Note: In the event that you lose your keychain transmitter or the transmitter fails to operate the keyless entry system, the valet switch can be used to override the optional Starter Interrupt, and therefore allow the engine to be started. To override system:

1. Open the door with the vehicle's door key.
2. Turn the ignition switch to the on position.
3. Flip the valet/override switch to the on position. LED will turn on solid.

The system will disarm, allowing the engine to be started and the vehicle to be operated normally. Always remember to move the valet switch to the off position to allow the passive arming and optional starter interrupt features to be operable the next time you park the vehicle.

ELIMINATING THE LOCK/UNLOCK CHIRPS

You can selectively eliminate the normal lock and unlock chirps by holding the transmitter button slightly longer when locking and unlocking. This will prevent the horn/siren chirps for one lock or unlock cycle. If you find this inconvenient and wish to eliminate these chirps permanently,

1. Start with the valet switch in the off position.
2. Turn the ignition switch "on" then "off".
3. Within 10 seconds of turning off the ignition, flip the valet switch on, "off", "on", "off", "on", "off".
4. If the chirps were on before you started, the siren will emit 2 short chirps indicating that the chirps are now off. If the chirps were off before you started, the siren will emit one short chirp indicating that the chirps are now on.

REMOTE PANIC OPERATION

The lock or unlock button of your keychain transmitter also serves as a panic button and will cause the vehicle horn (or optional siren) to sound on demand. To use the panic feature, you must be within the system's maximum operating range. In an emergency situation, to use the panic feature, press and hold the lock or unlock button of your keychain transmitter for 3 seconds. This will cause the lights to flash, the vehicle horn (or optional siren) to sound, and if the optional interior illumination circuit was installed, the interior lights to flash. The panic mode will continue for 30 seconds and then reset.

To disengage the panic feature before the 30 seconds are up, press and hold either the lock or unlock button of your keychain transmitter for 3 seconds or press the option button momentarily. The doors can be unlocked or locked while in "panic" mode by momentarily pressing the lock or unlock button respectively.

ADDITIONAL REMOTE FUNCTION CHANNEL 2

The system has an additional output, (Channel 2), that can be connected to a number of different optional accessories. Some of the more common uses for this channel are:

- Remote Trunk Release
- Remote Window Close

To operate the accessory associated with Channel 2, press and hold the option button of your keychain transmitter for 4 seconds.

NOTE: You may access the Channel 2 command regardless of whether the system is "locked" or "unlocked", but not when the ignition switch is in the on position. This prevents the output from accidentally opening the vehicle's trunk when the vehicle is in motion.

ADDITIONAL REMOTE FUNCTION CHANNEL 3

The system has an additional output (Channel 3), that can be connected to a number of different optional accessories. Some of the more common uses for this channel are:

- Remote Engine Start
- Remote Window Close
- Remote Garage Door Interface

To operate the accessory associated with Channel 3, simultaneously press both buttons of your keychain transmitter which were configured and programmed for this function.

NOTE: The channel 3 output will remain active for as long as the transmitter buttons are held. Certain accessories may take advantage of the extended output capability of this channel. To discontinue the output, simply release the transmitter buttons.

IGNITION DOOR LOCKING/UNLOCKING

The system is capable of being programmed for the added safety and security of ignition controlled door locking and unlocking. These features are separate, so the unit may be programmed for one, or both, or neither.

When the ignition door locking feature is programmed, the system will cause all door locks to lock whenever the ignition switch is turned from the off to on position (providing that all doors are closed at that time). All doors will lock approximately 3 seconds after the vehicle's ignition switch is turned on. This is a nice feature for maintaining the personal safety of the occupants of the vehicle in an effortless and automatic manner.

When the ignition door unlocking feature is programmed, the system will cause all door locks to unlock whenever the ignition switch is turned from the on to off position. All doors will unlock immediately after the vehicle's ignition switch is turned off. If 2 Step unlock was installed, only the driver's door will unlock.

As stated, these features are programmed separately, so you may chose to use one, both, or neither. Please consult with your dealer to consider your options.

TWO STEP UNLOCK (ACCESS GUARD)

By pressing the unlock button of the keychain transmitter as you would normally (refer to the section titled "Unlocking The System" earlier in this manual), the system will disarm, and only the driver's door will unlock. If however, you should then decide instead that you want all doors to unlock, you can simply press the unlock button a second time and all doors will unlock.

Feature And Function Settings			
(To Be Completed By Installer)			
Feature	Setting		
Passive Active Arming	<input type="checkbox"/> Passive	<input type="checkbox"/> Active	
Ignition Door Locking On/Off	<input type="checkbox"/> On	<input type="checkbox"/> Off	
Ignition Door Unlocking On/Off	<input type="checkbox"/> On	<input type="checkbox"/> Off	
Chirps On/Off	<input type="checkbox"/> On	<input type="checkbox"/> Off	
Passive Door Locking	<input type="checkbox"/> On	<input type="checkbox"/> Off	
Horn/Siren Output	<input type="checkbox"/> Horn	<input type="checkbox"/> Siren	
Door Lock/Unlock Pulse	<input type="checkbox"/> 800ms DL Pulse	<input type="checkbox"/> 3.5 S D.L. Pulse	<input type="checkbox"/> 800ms D.L. Pulse 800ms Dbl D/U/L Pulse
Function	Transmitter Button(s)		
Lock/Unlock	<input type="checkbox"/> Lock 1	<input type="checkbox"/> Unlock 2	<input type="checkbox"/> Option Button
Panic	<input type="checkbox"/> Lock 1	<input type="checkbox"/> Unlock 2	<input type="checkbox"/> Option Button
Remote Trunk Release	<input type="checkbox"/> Lock 1	<input type="checkbox"/> Unlock 2	<input type="checkbox"/> Option Button
Remote Window Close	<input type="checkbox"/> Lock 1	<input type="checkbox"/> Unlock 2	<input type="checkbox"/> Option Button
Remote Garage Door Opening	<input type="checkbox"/> Lock 1	<input type="checkbox"/> Unlock 2	<input type="checkbox"/> Option Button
Remote Engine Starter	<input type="checkbox"/> Lock 1	<input type="checkbox"/> Unlock 2	<input type="checkbox"/> Option Button
AA-925			
SYSTEM FUNCTIONS AT A GLANCE			
LED INDICATORS:			
RAPID FLASHING	=	PASSIVE ARMING	
SLOW FLASHING	=	ARMED	
OFF	=	DISARMED	
ON SOLID	=	VALET MODE	
OPTIONAL VEHICLE HORN OR SIREN CHIRP INDICATION:			
1 CHIRP	=	LOCK / ARM	
2 CHIRPS	=	UNLOCK / DISARMED	
CONTINUOUS	=	PANIC MODE	
ALARM PARKING LAMP INDICATIONS:			
1 FLASH	=	LOCK / ARM	
2 FLASHES	=	UNLOCK / DISARM	
CONTINUOUS FLASH	=	PANIC MODE	
© 2003 Audiovox Electronics Corp., Hauppauge, NY 11788		128-6710	